


UPLIFT DESK®


UPL146 UPLIFT Task Light

Box Contents:


- UPLIFT Task Light
- Power Adapter
- User Guide

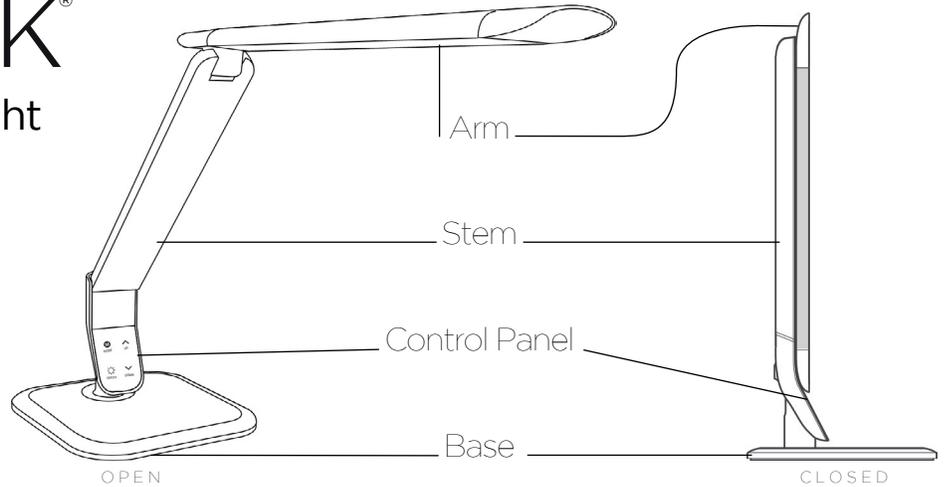

1. Power on

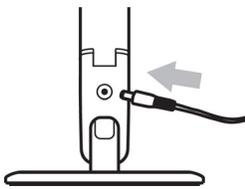


a. Connect the Power Adapter to the rear of the Control Panel and plug into an outlet.

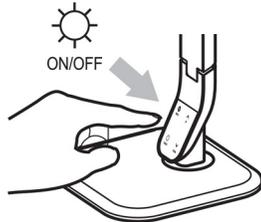

b. To turn the light on, touch the "ON/OFF" button on the Control Panel.

2. Operation

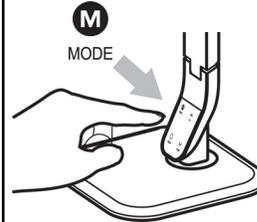

a. There are three light modes available: cold light, warm light and natural light. To change light modes, touch the "Mode" button on the Control Panel until you find your desired setting.


b. There are five brightness settings available. Use the "UP" and "DOWN" buttons on the Control Panel to increase or decrease brightness.




3. Adjustments

Note: Please hold the Base while adjusting the Stem or Arm.


a. The Arm has 145 degrees of angle adjustment available, and can also be rotated to aim the light.

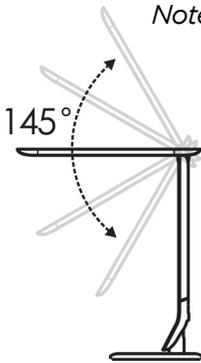

b. The Stem has 40 degrees of angle adjustment available...

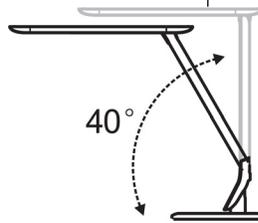

...and can also be rotated 80 degrees in either direction.

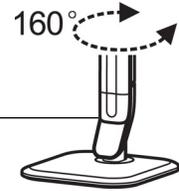

! - Important Notes - !

- To avoid electric shock, do not attempt to disassemble the light.
- The included Power Adapter is designed exclusively for this product. Do not attempt to use any other adapter.
- Do not try to adjust the moveable components beyond their adjustment range, to avoid damage to the shell or joints.
- Avoid using the light in very high temperatures or very high humidity.

- Do not look directly into the LED light source.
- In the event that one of the below occurs, disconnect the Power Adapter and discontinue use:
 - The Power Adapter or cord breaks
 - The outer shell or one or more of the joints break
 - The light emits sparks or smoke
 - Abnormal flickering occurs or the LED light bulb breaks

UPLIFT DESK

800-349-3839 - info@upliftdesk.com - www.upliftdesk.com