
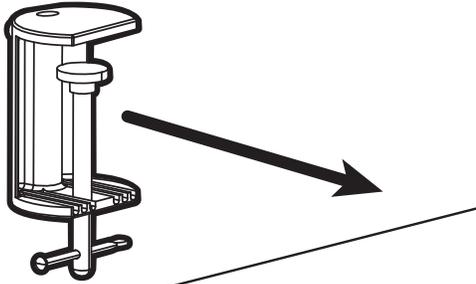
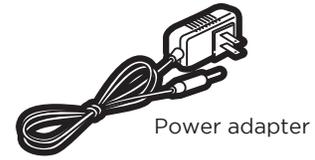



# UPLIFT DESK<sup>®</sup> E7 LED Desk Lamp LTG001

## Package Contents

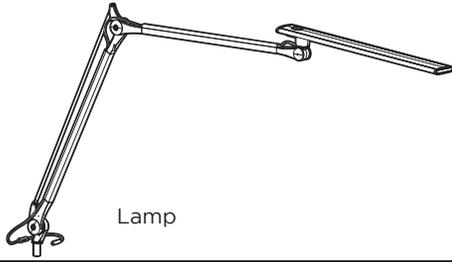


### Step 1

To attach the Clamp to the desk, loosen the knob under the Clamp and slide onto your desk. Tighten the knob until the Clamp is securely fastened to the edge of your desk. Clamp will fit worksurfaces up to 2.25" thick

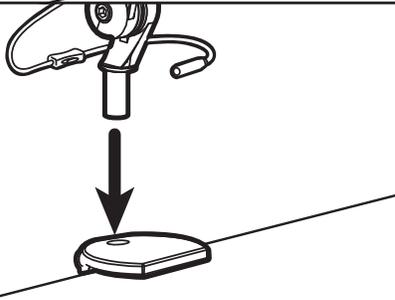

### Step 2

Install the Lamp to the Clamp base by sliding the bottom peg of the Lamp into the hole on the Clamp.


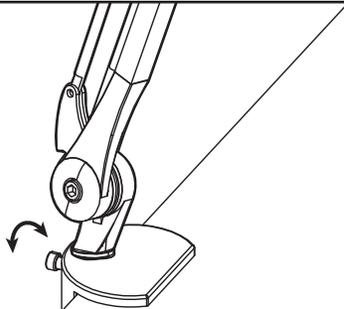


### Step 3

Tighten the set screw in the Clamp so the Lamp is secure and won't come unattached.

#### Note:

 
If you purchased the Desk Base (LTG002) or Floor Base (LTG003), they will have similar holes and set screws for their assemblies.

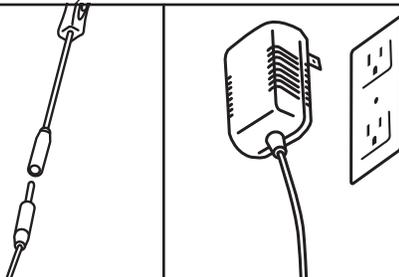

### Step 4

Plug the end of the Lamp's cord into the Power adapter, and plug the Power adapter into a wall outlet.


To power on the light, flip the switch on the power cord, and tap the button on the top of the Lamp's head to turn it on. Tapping this button again will turn the lamp off.

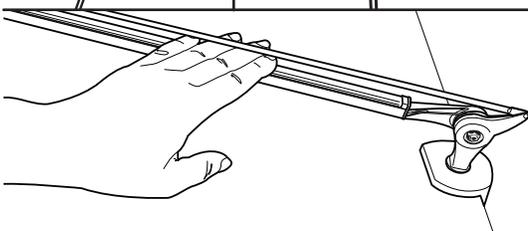

### A warning before use


When the light is lowered down, the space between the arm's first segment and the stabilizing metal bar can tighten and become a pinch point. To avoid injury, do not put your fingers or any part of your body in this area.

## Adjustment Guide

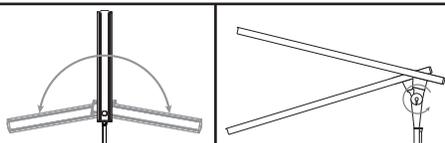


### Lamp Rotation & Tilt

Lamp head will rotate right and left 200 degrees. Adjust the Lamp head's tilt by loosening the knob under the lamp head. Rotate to your preferred angle and tighten the knob to set the lamp head in place.

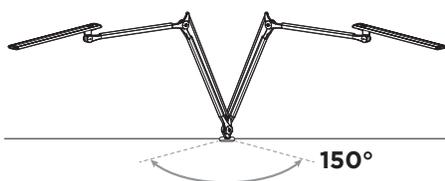

### Wide Range of Adjustability

The Lamp's arm can rotate 150 degrees from the base and can be adjusted at the joints to allow for several different Lamp positions.

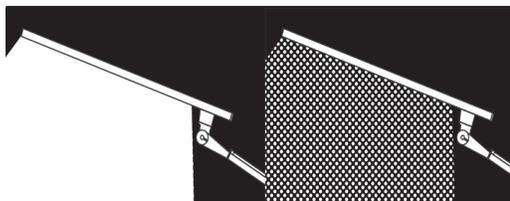

### Fluid Dimming Feature

Touch and hold the power button to dim the light to its dimmest setting. To dim halfway, press and hold the power button and then release it when it reaches the medium brightness you prefer. The Lamp will remember this brightness after you turn the lamp off. Touching and holding the power button again will bring the light back to its previous highest or lowest setting.



## CAUTIONS & WARNINGS



**Caution:** Read all instructions before assembly. Failure to assemble properly may result in product damage or injury.



**Caution:** If using Lamp on an adjustable height work surface, raise to maximum height before attaching Lamp to ensure that the power cord will reach the outlet when the worksurface is raised.



**Caution:** Route the power cord so it won't be stepped on, pinched, or have items placed on it. Do not place the Lamp anywhere where it could become a tripping hazard.



**Warning:** There is a pinch point in the space between the arm's first segment and the stabilizing metal bar. Keep fingers out of that space.



**Warning:** When unplugging, do not pull on power cord or unplug from any angle other than straight from outlet. Never touch metal conductors on the plug while plugging or unplugging.



**Warning:** To avoid electric shock, do not disassemble or tamper with the Lamp or Power adapter. Only use the Power adapter included with this Lamp.



**Caution:** Do not use outdoors. Never use in a wet environment. Never allow liquid of any kind to spill onto or enter any part of the product. Do not use in high temperatures.



**Warning:** Unplug and discontinue use in the event that the following occurs.

- The Power adapter or cord breaks
- The Lamp's casing or one or more of the joints break
- The light emits sparks or smoke
- Abnormal flickering occurs or the LED bulb breaks



**Caution:** Do not try to push the joints beyond their adjustment range, as this will cause damage.