


UPLIFT DESK®

ACC146 UPLIFT Task Light


Box Contents:

- UPLIFT Task Light
- Power Adapter
- User Guide

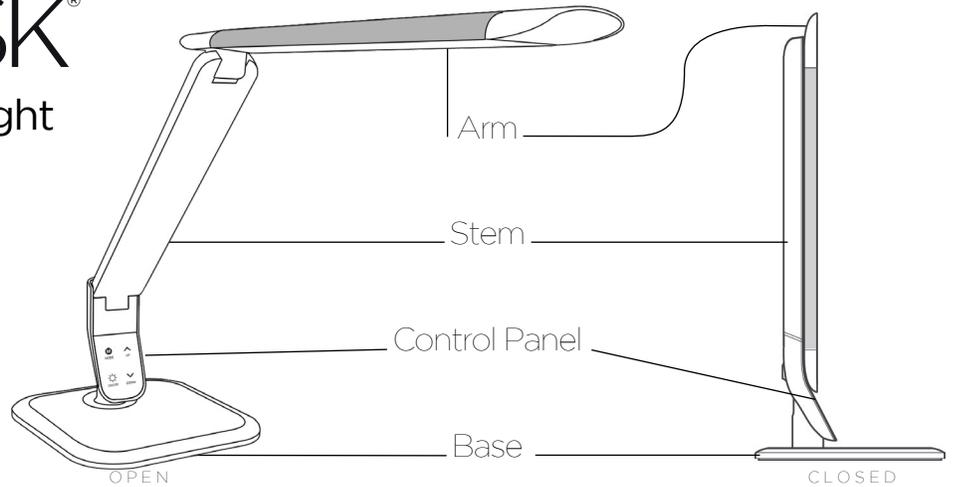


1. Power on

a. Connect the Power Adapter to the rear of the Control Panel and plug into an outlet.

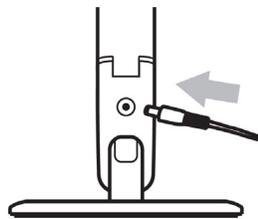


b. To turn the light on, touch the "ON/OFF" button on the Control Panel.

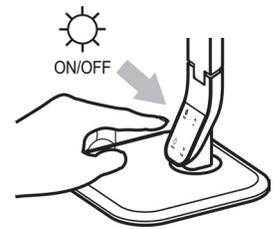

2. Operation

a. There are three light modes available: cold light, warm light and natural light. To change light modes, touch the "Mode" button on the Control Panel until you find your desired setting.

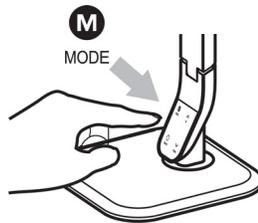


b. There are five brightness settings available. Use the "UP" and "DOWN" buttons on the Control Panel to increase or decrease brightness.




3. Adjustments

Note: Please hold the Base while adjusting the Stem or Arm.


a. The Arm has 145 degrees of angle adjustment available, and can also be rotated to aim the light.

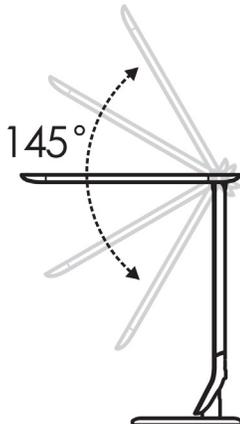

b. The Stem has 40 degrees of angle adjustment available...

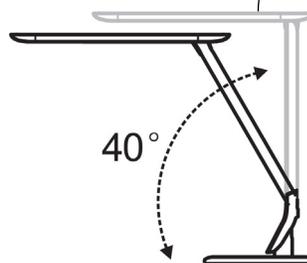

...and can also be rotated 80 degrees in either direction.

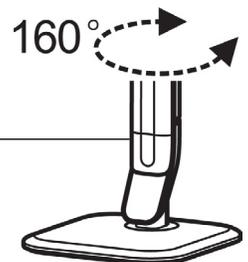

Live Brighter with
UPLIFT



IMPORTANT NOTES



To avoid electric shock, do not attempt to disassemble the light.



The included Power Adapter is designed exclusively for this product. Do not attempt to use any other adapter.



Avoid using the light in very high temperatures or very high humidity.



Do not look directly into the LED light source.



Do not use outdoors.



Never use in a wet environment. Never allow liquid of any kind to spill onto or enter any part of the product.



This product is only to be operated from the power source indicated on the product. Use only with a grounded (neutral) conductor. For safety do not bypass or disable the third (grounding) pin.



To remove powered devices safely grasp device plug and pull straight from powered outlet. Do not pull on device cord or remove plug from any angle other than straight from outlet. Never touch metal conductors on plug during connecting or removal from product.



Route power cord where it will not be stepped on, pinched, have items placed on it, or to be a tripping hazard. Never allow power cord to sit in any liquid or get wet in any manner.



Disconnect the Power Adapter and discontinue use in the event that the following occurs.

- *The Power Adapter or cord breaks*
- *The outer shell, or one or more of the joints break*
- *The light emits sparks or smoke*
- *Abnormal flickering occurs or the LED light bulb breaks*



Do not try to adjust the moveable components beyond their adjustment range, to avoid damage to the shell or joints.



If using light on adjustable height worksurface, raise worksurface to maximum height before positioning fixture to ensure that cord will reach the outlet when worksurface is raised.

UPLIFT DESK

800-349-3839 - info@upliftdesk.com - upliftdesk.com