


# UPLIFT DESK<sup>®</sup>

Under Desk Wire Tray  
ACC002

Straighten up those messy cables with the easy-to-use UPLIFT Under Desk Wire Tray. After a quick and simple installation, the UPLIFT Under Desk Wire Tray helps to quickly organize cables and power strips, transforming clutter into a neat and orderly work space. The tray includes wood screws and an adhesive strip for installation; using both is recommended and will ensure that the tray is mounted securely and gives the most support for wires and power strips.



**Caution:** Make sure that any cord plugged into the wall is of a length that will accommodate the change in height of your sit-stand desk.

#### Package Contents:




Under Desk Wire Tray  
(qty 1)

 screws  
(qty 2)

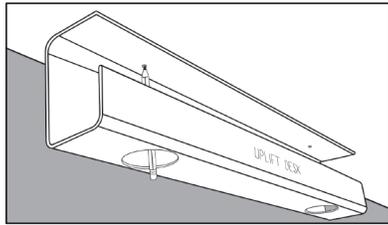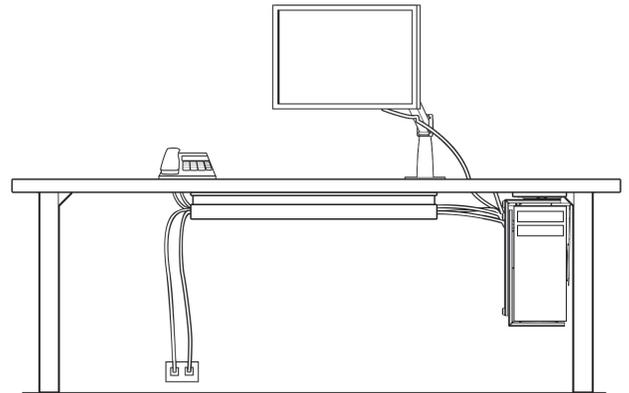

### Step 1


Determine where to mount the wire tray. Hold it under your desk to see where it will fit. Note that more than one wire tray can be installed depending on the size of your desk and your wire routing requirements. Once you decide on the placement, mark the location of both the tray and the two screw holes with a pencil.

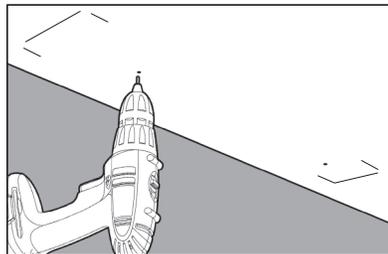

### Step 2


Use a drill with a 1/8" to 3/16" bit to make pilot holes where your two pencil marks are located. Only drill deep enough to get the tip of the screw in.

**CAUTION:** Do not drill through the desktop surface.

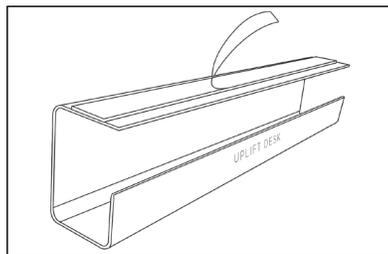

### Step 3

Peel off the adhesive strip backing. Place the tray into position by lining it up with the pencil markings from step 1. Press and hold firmly in place for 30 seconds. Wait one hour before use if you don't insert the screws. (Note: Some customers choose not to use the screws. Screws do help hold the wire tray in place and are recommended for more secure installation and to hold the weight of the wires and power strip)

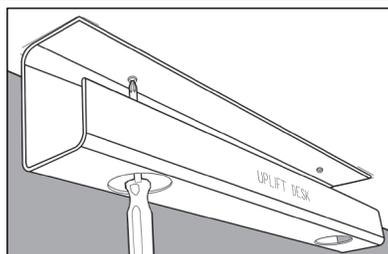

### Step 4

Make sure the screw is not too long for your desktop thickness by holding the screw up next to the desktop side. Attach the wire tray to the underside of the desk by using the two included screws and a Phillips head screwdriver. Your UPLIFT Under Desk Wire Tray is now ready for use! Put a power strip into the wire tray and/or route wires as needed.