


3-Sided Clear Acrylic Screen

ACC071

UPLIFT DESK

Package Contents



Back panel
(qty 1)
(60" or 72" width)



Side panel
(qty 2)

Ships in separate bag



Corner connector
(qty 2)

Ships in separate box



Clamp gasket
(qty 6)



Support gasket
(qty 6)

Ships in separate box




Clamp bracket
(qty 6)



Support bracket
(qty 6)



Flat head screws
(qty 12)

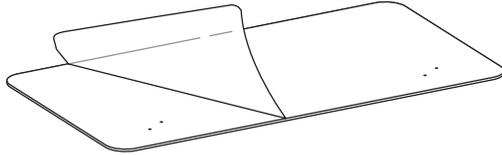

Step 1


After unpacking, remove the protective film from both sides of each panel. The film is only used to protect against scratches during shipment of the panels.



Step 2

Align the posts on the Support brackets with the holes in the Support gaskets and press the two parts together.

Then align the holes in the Clamp brackets and Clamp gaskets in the orientation shown.

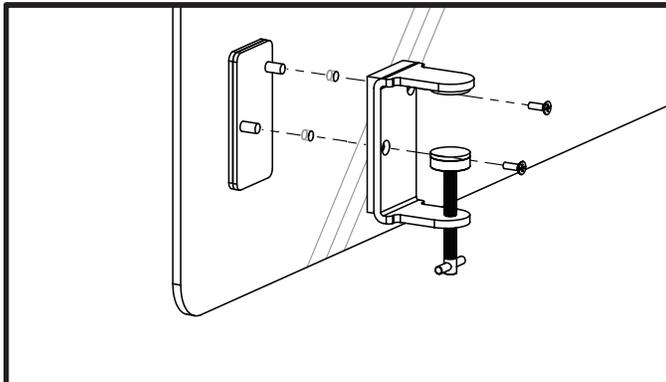


Step 3

Line up and insert the posts of each Support bracket into the holes in the Back panel so the Support gaskets are flush against the panel. Make sure the long end of each the Support bracket is pointing down toward the floor, as shown.

From the other side, line the Clamp brackets up with the posts and holes and insert the Flat head screws as shown. Tighten until snug, **but do not over tighten.**


Repeat these steps to attach the hardware kits to the Side panels.

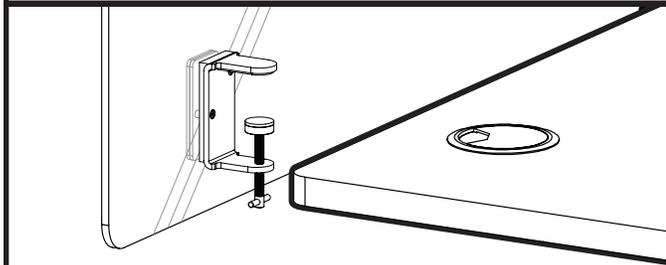

Step 4

Loosen the clamps on the Back panel so that the openings are wide enough to fit onto your desktop (mounting hardware is designed to fit on desktops between 0.75" and 1.75" thick).

Slide the Back panel onto the back of the desktop and tighten the clamps just enough to hold the panel in place. Do not tighten the clamps completely until the next step.

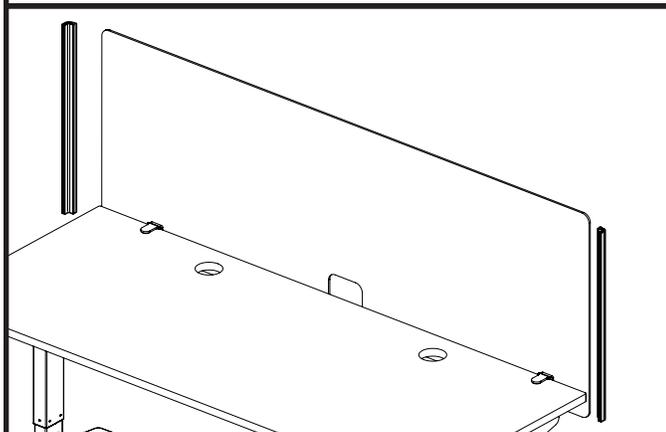


Step 5

IMPORTANT: Center the Back panel on the back of your desktop making sure that the ends of the panel are lined up with the sides of your desktop. This is important to ensure that the Side panels are able to connect properly to the Back panel.

Once the rear Back panel is centered on the desktop, tighten the mounting hardware clamps while pressing the Clamp brackets against the edge of the desktop to keep it standing straight up.


Next, press the Corner connectors onto each side of the Acrylic panel. Make sure the connectors are completely seated and centered on the side edge of the panel.

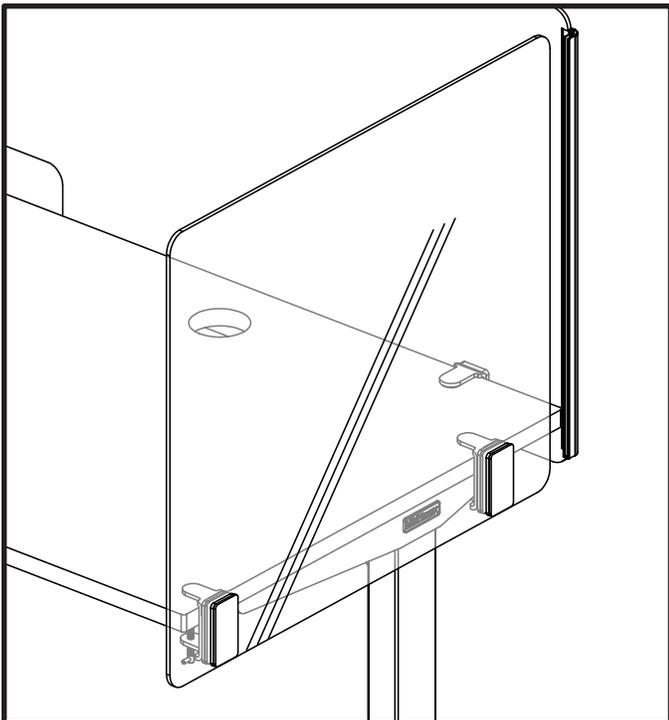

Step 6

Loosen the clamps on each of the Side panels so that the openings are wide enough to fit onto your desktop.

Slide one of the Side panels onto one of the sides of the desktop and tighten the clamps just enough to hold the panel in place. Do not tighten the clamps completely until the next step.

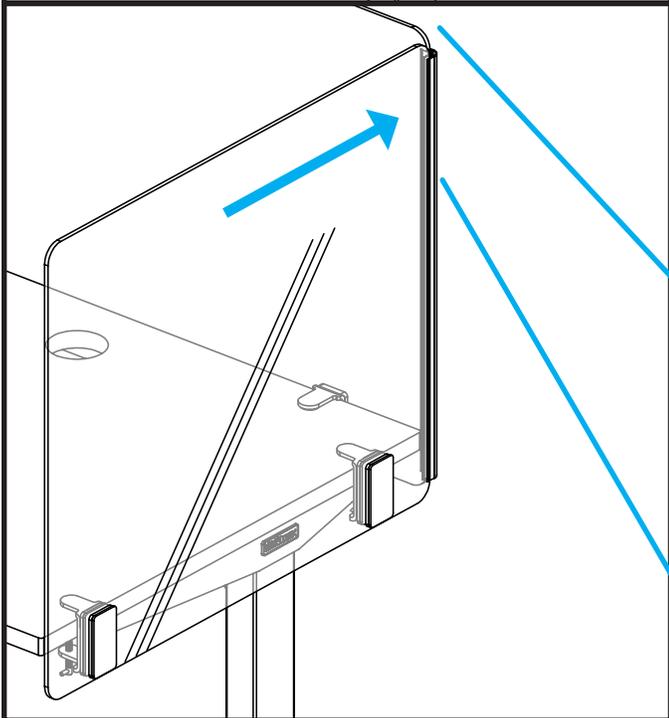

Step 7

Slide the Side panel assembly towards the Back panel until it meets the Corner connector.

While supporting the Back panel with one hand, press the Side panel until its edge is fully seated into the Corner connector.

Once the Side panel is in place, tighten the mounting hardware clamps while pressing the Clamp brackets against the edge of the desktop to keep it standing straight up.

Repeat Steps 6 and 7 to attach the other Side panel.

⚠ CAUTIONS & WARNINGS

⚠ **CAUTION:** Read all instructions before assembly. Failure to assemble properly may result in damage.

© **Copyright Notice:** This guide is a component of the UPLIFT Desk Product. This guide is a part of the scope of delivery, even if the item is resold. This guide is also available on the UPLIFT Desk website: upliftdesk.com. Excerpts or copies may not be forwarded to third parties or used in any other published form without the prior written consent of UPLIFT Desk. These instructions are subject to United States copyright law.