


Acrylic Privacy Panel Hardware Gaskets

ACU068

UPLIFT ACOUSTICS®


Package Contents



Support
gasket
(qty 2)




Clamp
gasket
(qty 2)

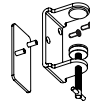


To be used in conjunction with...

Privacy Panel
Hardware
(ACU062)

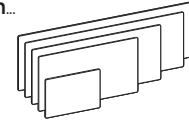


UPLIFT Acrylic
Privacy Panels

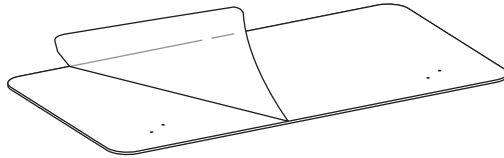

Step 1

After unpacking your Acrylic Privacy Panels, remove the protective film from both sides of each panel. The film is only used to protect against scratches during shipment of the panels.

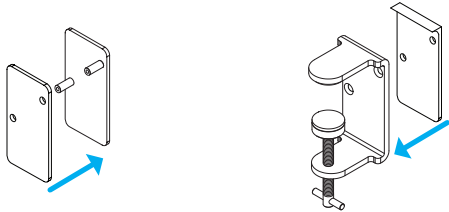

Step 2

Align the Support gasket holes with the posts on the Support brackets from the ACU062 hardware kit and press the two parts together. Then align the Clamp gasket to the Clamp bracket in the orientation shown. From there, continue the rest of the assembly using the instructions that came with the ACU062 Privacy Panel Mounting Hardware starting with “Step 2”.

⚠ CAUTIONS & WARNINGS

⚠ **CAUTION:** Read all instructions before assembly. Failure to assemble properly may result in damage.

© UPLIFT Desk • 800-349-3839 • info@upliftdesk.com • upliftdesk.com